






Thule XT Kit 3140

> Instructions

FORD Transit Courier, 4-dr Van, 14-

This kit is only for vehicles with fixpoint mounting.

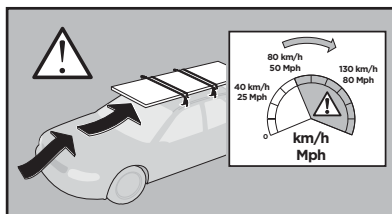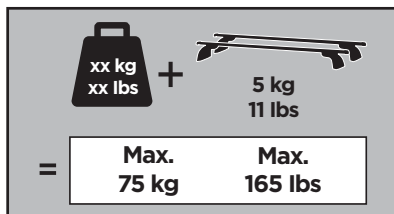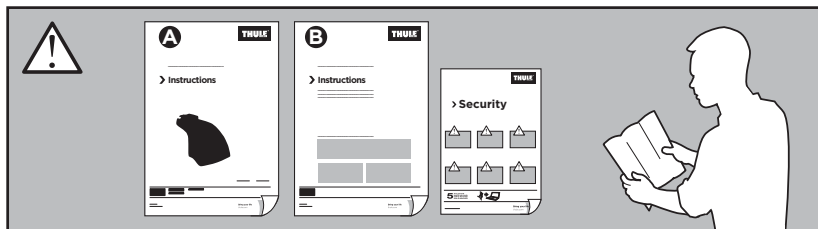


ISO 11154-E


183140

C.20141210
509-3140-01


Bring your life
thule.com



◀ **01** x4



◀ **206** x2




◀ **207** x1



◀ **208** x2

A

12 mm x8

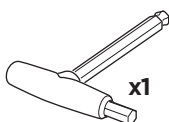

x1

50784 x4


50786 x4

50870 x4

51294 3 mm x1

51340 TORX T25 x1

50273 x1



x1



x1

1

01



208




207



01



01




206




206






01




2

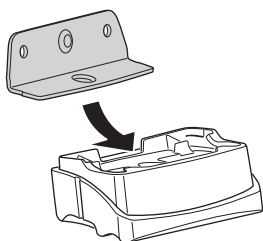


C

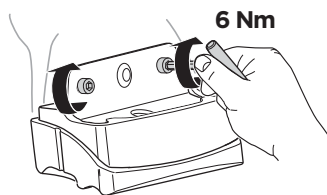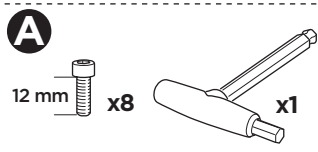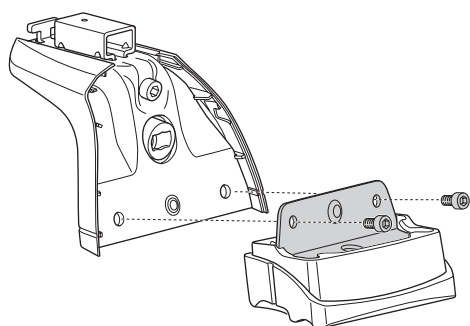

3



x1

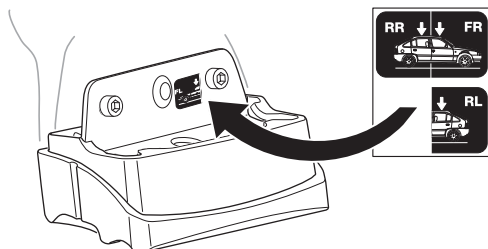

4

x4

x4

x4

x1


3 mm

x1



x1

A

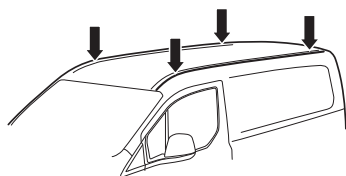

x4




x4

B


3 mm

x1

2 Nm

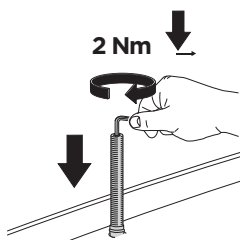


C

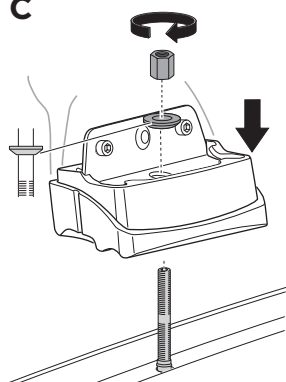

D

x1

4 Nm

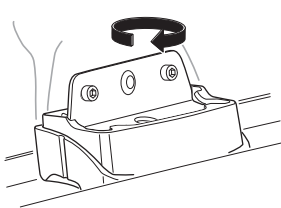

5

A

x1

6 Nm

